

SecureMount Base Assembly

Assembly & Installation Instructions

The JES SecureMount option assembly consists of a pipe nipple (1), flat washer (1), external tooth washer (1), and nuts (2). The hardware is supplied assembled to lamp base.



Step 1

If mounting to bedside cabinet:
Remove drawer and set aside.

Step 2

Drill 1/2" hole in table top in the
location specified by owner.



Step 3


Remove nut (1), flat washer (1), and
external tooth washer (1) from the
pipe nipple. Place lamp base and
bolt-down pipe nipple over hole
and set in place.



| SecureMount Base — Continued

Step 4

Attach flat washer (1), external tooth washer (1), and nut (1) to pipe nipple at underside of table top.
Lamp base should sit squarely on table top.

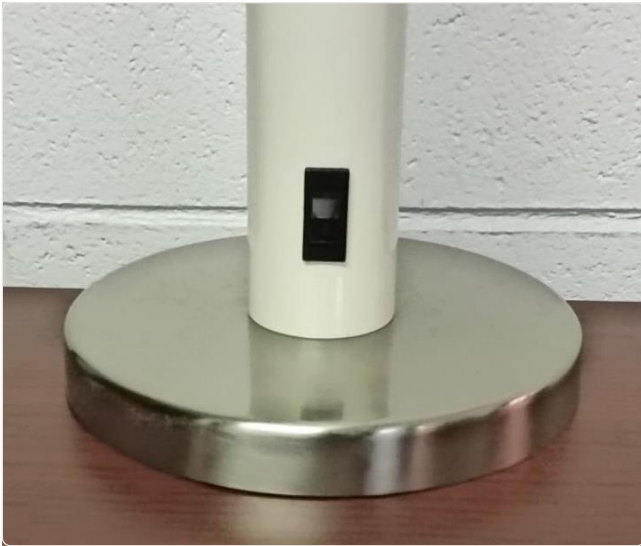

Step 5

Tighten with 11/16" wrench.



Step 6

If necessary, replace drawer.



Done

JES SecureMount assembly and installation complete.

