

SecureMount Pro Base Assembly

Assembly & Installation Instructions

Step 1

Lay out tools — You will need:



- 11/16" Open Wrench
- Drill
- 1-7/8" Drill Bit
- 2-3/8" DIA Heavy Duty Slotted Washer (included in packaging)

If top drawer exists — remove it now

Step 2

Drill your holes:

- After determining preferred lamp placement, drill tabletop entrance hole and clean the surface
- Turn the furniture to access the backside
- Drill exit hole for lamp plug/cord

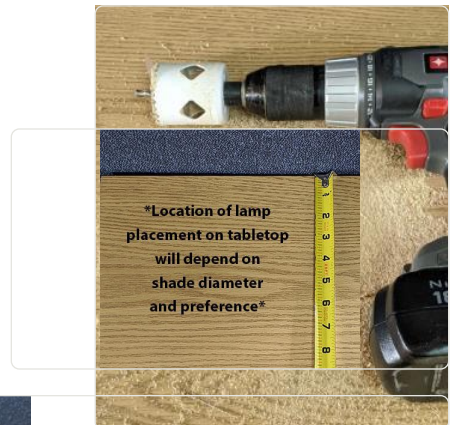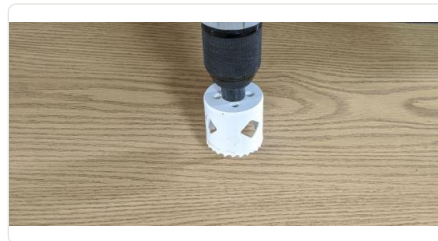

SecureMount Pro — Continued

Step 3

Placement of lamp and cord:


- Feed cord through top entrance hole
- Place lamp over top hole
- Feed cord through back exit hole



Step 4

Secure SecureMount Pro lamp to tabletop:

- Fit slotted washer (supplied with lamp) around the nipple between standard washer and bottom of tabletop
- Tighten nut with 11/16" wrench
- Replace top drawer if necessary

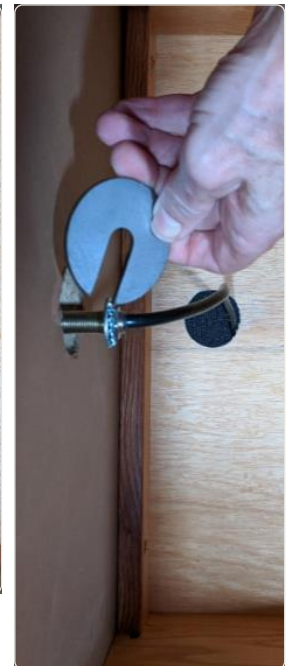

| SecureMount Pro — Completed

STEP 4 — CONTINUED



Step 5 — Done

Clean up and rest at ease knowing that you've provided a home-like atmosphere for your facility and your residents while keeping them safe and secure.

See Lamp Shade Assembly Instructions for shade installation completion.

